


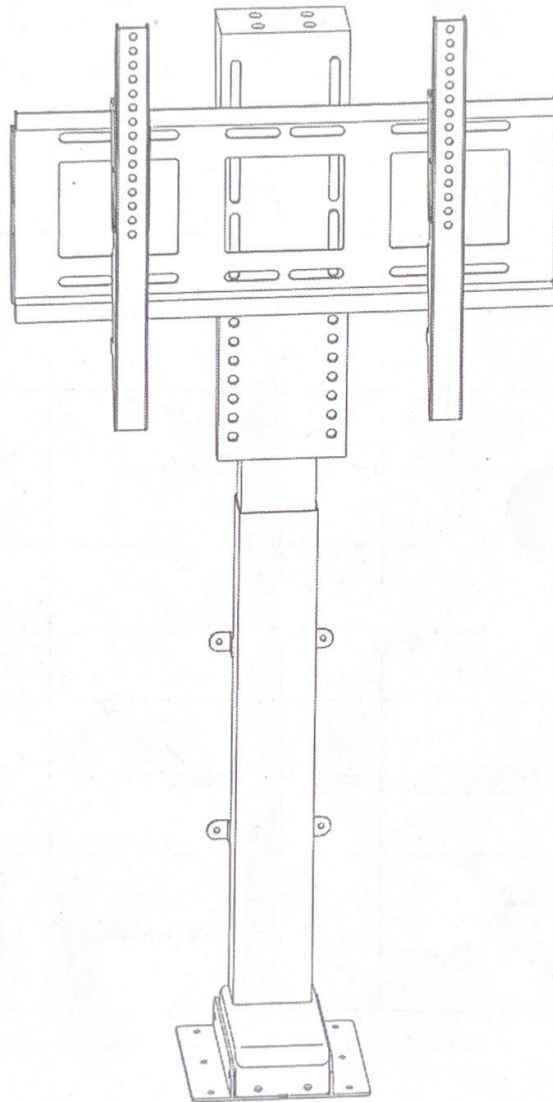

















ASSEMBLY INSTRUCTIONS



Model No : CTD-TV

 Component Checking-list

A	Column		1pc	I	Control Box		1pc
B	Hanger		1pc	J	Screw M6*16		8pcs
C	Bracket		1pc	K	Screw M8*12		4pcs
D	Column fixing plate		1pc	L	4mm Spanner		1pc
E	Remote		1pc	M	5mm Spanner		1pc
F	Power Cord		1pc	N	M8 Nut		4pcs
G	Hand Controller		1pc	O	Screw ST4*16		10pcs
H	Adaptor		1pc	P	Space Screw Bag		1bag




Crosshead (Phillips) screwdriver



required for installation


1

Accessing The Column With Plate

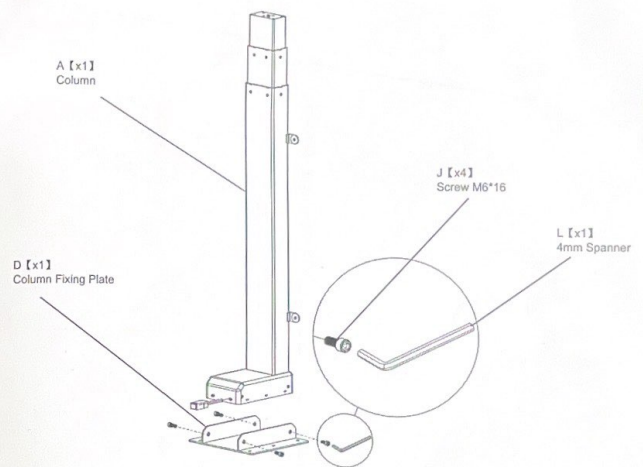


Please fix Lift Column and column fixing plate by Screws M6*16*4.

2 Installing The Column and Bracket

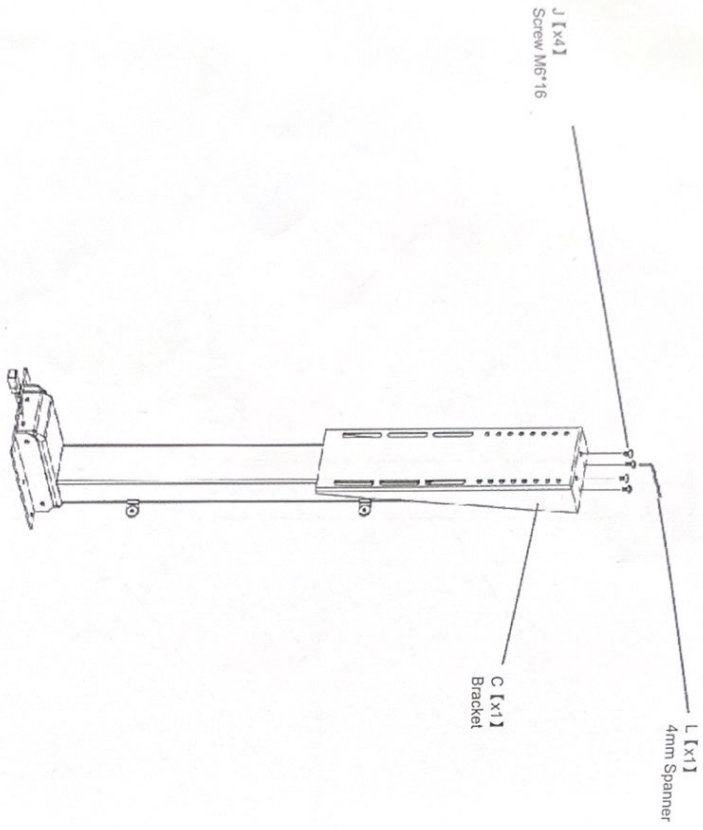



▲ Please fix the TV bracket and Lift Column by Screws M6x16*4

3 Fix TV Holder With Bracket

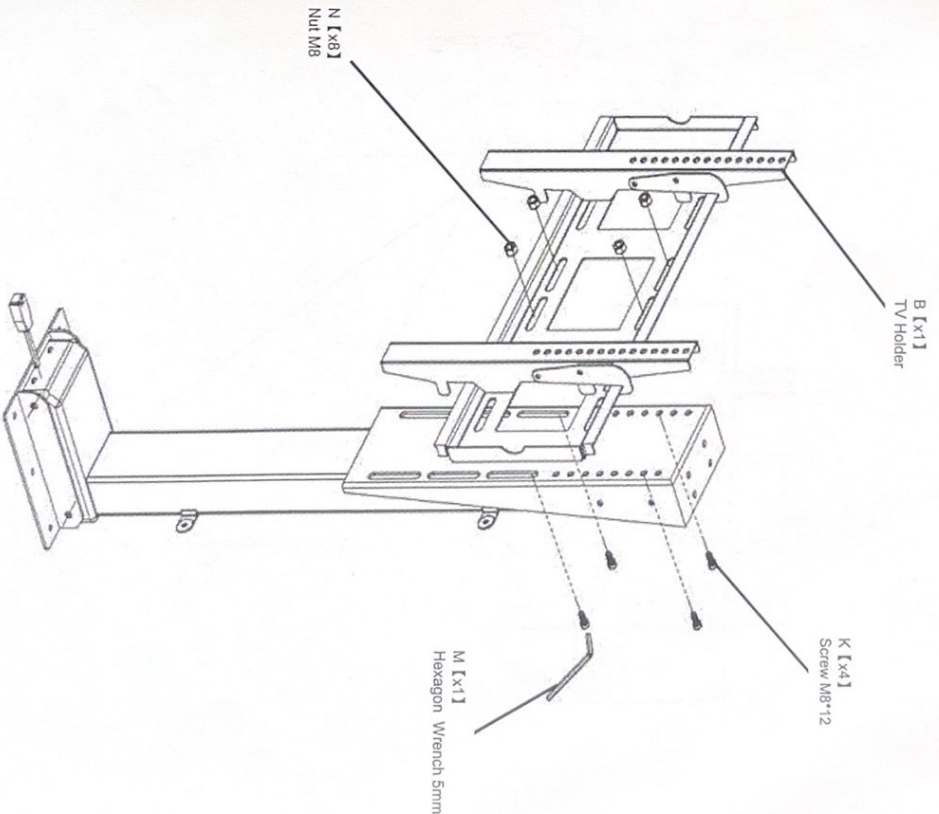


4

 Fix Column And Plate With Cabinet

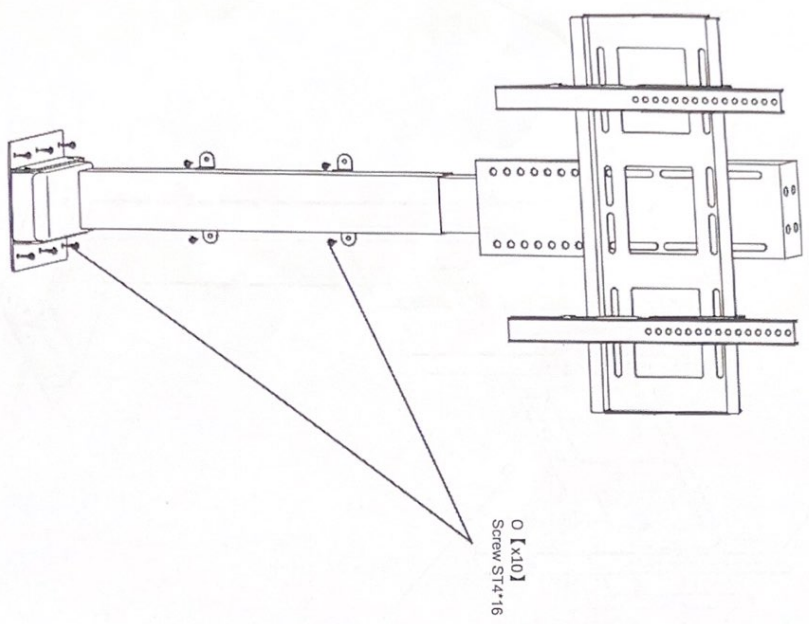


5


Connect The Control System

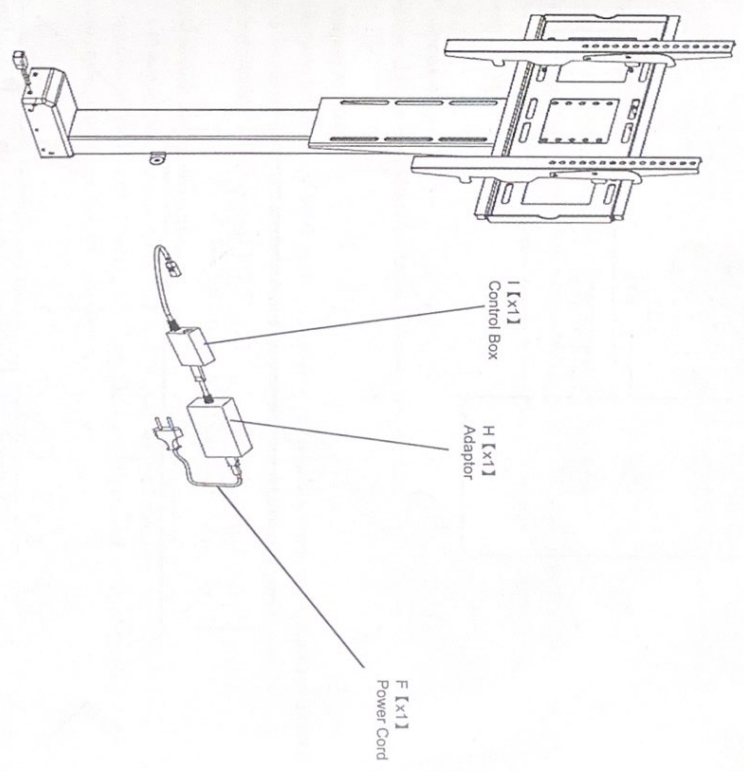

【1】 Remote Control

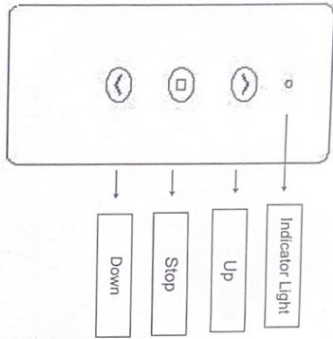

【2】 Hand display

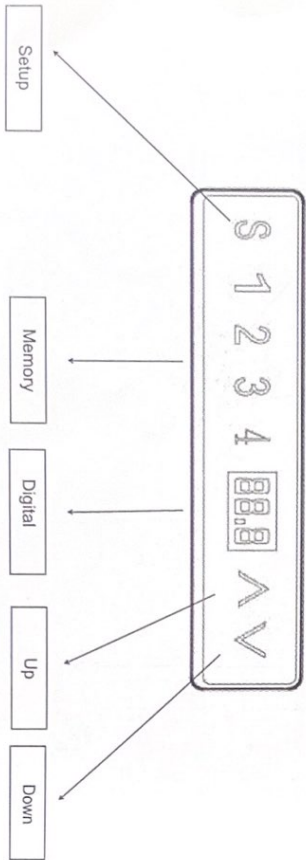

【3】 Remote Control Matching

Keep press up button "↶", also connect both adapter and control box meanwhile, until we hear the buzzing

【4】 Reset Operation

After successful connection between control system and Lift Column, please hold the Down Button "↷" for several seconds, the system enters initialization mode. Then remove handset until handset of LED display shows number (RST to height).

【5】 Column Stop Operation

Handset: Stop while running, press opposite button: upwards or downwards.
Remote Control: When the column during rising, you want to stop it, then you can press the button "↷", the column will stop to rise. And if necessary to stop the column during the descent, you can press the button "↶", it will stop to move.

【6】 Unit Conversion

Keep press "S" for 8s, the unit "cm" inch system will switch automatically.

【7】 Memory function

Handset: Touch "S" button, indicator show "S- ", meanwhile "S- " flicker, at the same time touch "1-4" button to reserve this position to relative "1-4", four memory positions can reserve. [Memory positions can be replaced with new preset height.]

【8】 Operation System Protection

After the lift runs continuously for 3-4 times, control system will be in protection. The handset shows "HOT", meanwhile, handset will be invalid. 18mins later, automatically connect or directly power off. (power off refers to indicator light of adapter goes out.)

Precautions:

The product shall be used in accordance with the technical parameters;
Keep away from corrosive gas and dusty environment, pay attention to waterproof.

▲ The TV Lift can work normally after doing RESET operation when handset show "RS"